



instruction manual

**eredeti használati utasítás
návod na použitie
manual de utilizare
uputstvo za upotrebu
navodilo za uporabo
návod k použití
uputa za uporabu**



OC 04



LED	7-digit, white
LED size	120 x 22 mm
Dimensions	150 x 70 x 45 mm
Weight	195 g



PRI	230 V~ 50 Hz / 0,2 A
SEC	5 V == / 0,3 A
Plug	-C+
Wire	» 180 cm

digital LED alarm clock

Before using the product for the first time, please read the instructions for use below and retain them for later reference. The original instructions were written in Hungarian language. This appliance may only be used by persons with impaired physical, sensory or mental capabilities, or lacking in experience or knowledge, as well as children from the age of 8, if they are under supervision or have been given instruction concerning use of the appliance and they have understood the hazards associated with use. Children should not be allowed to play with the unit. Children may only clean or perform user maintenance on the appliance under supervision. Keep children away from the packaging material, if it contains poly bag or other hazardous component!

- real wooden housing • highly visible white LED display • customizable display modes • display can be switched off if the strong light is disturbing at night • display can be activated by clapping your hands or tapping next to the clock • time – date – temperature (0...50 °C) • 12/24 hour time display • alarm with 1 minute beep-beep sound • three alarm times simultaneously • power supply: AC adapter (included) or 3 x AAA batteries (not included) • button cell (CR 2032) for memorizing accurate time, included

INSTALLATION

Power supply can be provided in several ways. The clock memory requires a CR 2032 button cell. It is in its place by delivery. If the clock forgets the exact time later, then this button cell has to be replaced. Remove the small cover inside the battery compartment with a screwdriver and insert a new button cell according to the marked polarity. For activating the LED display, included adapter has to be connected, or 3 x AAA (1,5 V) batteries have to be inserted. With battery powered operation, the device becomes portable. It is recommended to turn off the continuous displaying to save battery lifetime. In this case, a service life of 3-4 weeks is expected.

WARNING! IT IS FORBIDDEN TO USE MAINS ADAPTER AND INSTERT 3 AAA BATTERIES AT THE SAME TIME!

- WARNING! RISK OF EXPLOSION IN CASE OF INCORRECT BATTERY REPLACEMENT! BATTERY CAN BE REPLACED ONLY WITH SAME OR REPLACING TYPE! DO NOT EXPOSE TO DIRECT HEAT RADIATION AND SUNSHINE AND DO NOT THROW IT TO FIRE IF THERE IS SOME LIQUID FLOWN OUT,**

THEN TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY COMPARTMENT WITH A DRY CLOTH!

KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND RECHARGE THE BATTERY! RISK OF EXPLOSION!

- Immediately remove the depleted batteries! Do not use different kinds of batteries and/or used and new batteries together! Non-rechargeable batteries must not be charged! Risk of explosion! Do not insert accumulators instead of batteries because they have a significantly lower voltage and efficiency!**

FUNCTIONS

After installation you will hear a voice signal and display will start lighting. You can step the following functions with SET button: **TIME – DATE – A1 alarm – A2 alarm – A3 alarm – TIME...**

Waste equipment must not be collected separately or disposed of with household waste because it may contain components hazardous to the environment or health. Used or waste equipment may be dropped off free of charge at the point of sale, or at any distributor which sells equipment of identical nature and function. Dispose of product at a facility specializing in the collection of electronic waste. By doing so, you will protect the environment as well as the health of others and yourself. If you have any questions, contact the local waste management organization. We shall undertake the tasks pertinent to the manufacturer as prescribed in the relevant regulations and shall bear any associated costs arising.

DISPOSING OF ALKALINE AND RECHARGEABLE BATTERIES

Press UP button more times to select one of the three modes. DP-1: it will show time (10 sec) and date (2 sec) alternately

DP-2: selected function (SET) will be displayed continuously, e.g. date

DP-3: continuous time displaying, date can be visible for 15 seconds after pressing SET button

ENERGY SAVING MODE – CLAP ACTIVATED SWITCH, ACOUSTIC SWITCH

Select energy saving mode with DOWN button, if you operate your device with 3 x AAA batteries. It is recommended to do so, if the strong brightness of the display is disturbing at night. By clapping or tapping to the furniture under the clock, the current time is visible for 10 seconds, then the display will switch off.

-- SD: energy saving mode and sound detector is switched off

ON SD: energy saving mode and acoustic switch is activated

EN

alarm clock

It is possible to set 3 times simultaneously and the alarm is repeated daily. The beep-beep sounds for a minute or can be turned off by any button. Select one of A1-A2-A3 alarms with SET button. Then keep holding for 2 seconds and set the desired time with UP and DOWN buttons. After setting the hours, press SET to confirm setting the minutes.

In the upper line of the display, a point lights up in case of the alarm has been set. The UP button will turn on or off the currently selected A1, A2 or A3 alarm time.

-- A1, -- A2, -- A3: alarm is switched off

ON A1, ON A2, ON A3: alarm is switched on

If no button is pressed for 15 seconds, it will exit the settings and record the current date.

When alarm is active, the dark display which is set to energy saving mode will turn on automatically.

real wooden housing • highly visible white LED display • customizable display modes • display can be switched off if the strong light is disturbing at night • display can be activated by clapping your hands or tapping next to the clock • time – date – temperature (0...50 °C) • 12/24 hour time display • alarm with 1 minute beep-beep sound • three alarm times simultaneously • power supply: AC adapter (included) or 3 x AAA batteries (not included) • button cell (CR 2032) for memorizing accurate time, included

power supply can be provided in several ways. The clock memory requires a CR 2032 button cell. It is in its place by delivery. If the clock forgets the exact time later, then this button cell has to be replaced.

Remove the small cover inside the battery compartment with a screwdriver and insert a new button cell according to the marked polarity. For activating the LED display, included adapter has to be connected, or 3 x AAA (1,5 V) batteries have to be inserted.

With battery powered operation, the device becomes portable. It is recommended to turn off the continuous displaying to save battery lifetime. In this case, a service life of 3-4 weeks is expected.

INSTALLATION

Power supply can be provided in several ways. The clock memory requires a CR 2032 button cell. It is in its place by delivery. If the clock forgets the exact time later, then this button cell has to be replaced.

Remove the small cover inside the battery compartment with a screwdriver and insert a new button cell according to the marked polarity. For activating the LED display, included adapter has to be connected, or 3 x AAA (1,5 V) batteries have to be inserted.

With battery powered operation, the device becomes portable. It is recommended to turn off the continuous displaying to save battery lifetime. In this case, a service life of 3-4 weeks is expected.

Please read the instructions carefully before use, and keep it to it if available in the future! Protect it from dust, humidity, liquids, heat, dampness, frost, shock and direct thermal radiation or sunlight! Use only indoor, in dry circumstances! Do not expose the device to splashing water and do not place objects, filled with liquids e.g. glass on it! Opened source of flame cannot be placed on the device! If you do not use the product for longer period, remove the batteries! It is forbidden to touch the adapter or the connecting cable with wet hands! In case of any damage of them, immediately power off the device! Due to continuous improvements the design and specifications may change without any prior notice. We don't take the responsibility for printing errors and apologize if there's any.

The product is not a toy. Keep out of reach of children. • THIS PRODUCT INCLUDES A BUTTON BATTERY. IT IS FORBIDDEN TO SWALLOW THE BATTERY. RISK OF CHEMICAL BURN. IN CASE OF INGESTION, IT MAY CAUSE STRONG INTERNAL BURN WITHIN 2 HOURS AND MAY LEAD TO DEATH. KEEP THE NEW AND USED BATTERIES OUT OF REACH OF CHILDREN. IF THE COVER OF THE BATTERY COMPARTMENT IS OPENED, IT IS FORBIDDEN TO SWALLOW THE BATTERY. RISK OF EXPLOSION IN CASE OF INCORRECT BATTERY REPLACEMENT! BATTERY CAN BE REPLACED ONLY WITH SAME OR REPLACING TYPE! DO NOT EXPOSE TO DIRECT HEAT RADIATION AND SUNSHINE AND DO NOT THROW IT TO FIRE IF THERE IS SOME LIQUID FLOWN OUT,

THEN TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY COMPARTMENT WITH A DRY CLOTH!

KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND RECHARGE THE BATTERY! RISK OF EXPLOSION!

Immediately remove the depleted batteries! Do not use different kinds of batteries and/or used and new batteries together! Non-rechargeable batteries must not be charged! Risk of explosion! Do not insert accumulators instead of batteries because they have a significantly lower voltage and efficiency!

• The product is not a toy. Keep out of reach of children. • THIS PRODUCT INCLUDES A BUTTON BATTERY. IT IS FORBIDDEN TO SWALLOW THE BATTERY. RISK OF EXPLOSION IN CASE OF INCORRECT BATTERY REPLACEMENT! BATTERY CAN BE REPLACED ONLY WITH SAME OR REPLACING TYPE! DO NOT EXPOSE TO DIRECT HEAT RADIATION AND SUNSHINE AND DO NOT THROW IT TO FIRE IF THERE IS SOME LIQUID FLOWN OUT,

THEN TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY COMPARTMENT WITH A DRY CLOTH!

KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND RECHARGE THE BATTERY! RISK OF EXPLOSION!

Immediately remove the depleted batteries! Do not use different kinds of batteries and/or used and new batteries together! Non-rechargeable batteries must not be charged! Risk of explosion! Do not insert accumulators instead of batteries because they have a significantly lower voltage and efficiency!

• The product is not a toy. Keep out of reach of children. • THIS PRODUCT INCLUDES A BUTTON BATTERY. IT IS FORBIDDEN TO SWALLOW THE BATTERY. RISK OF EXPLOSION IN CASE OF INCORRECT BATTERY REPLACEMENT! BATTERY CAN BE REPLACED ONLY WITH SAME OR REPLACING TYPE! DO NOT EXPOSE TO DIRECT HEAT RADIATION AND SUNSHINE AND DO NOT THROW IT TO FIRE IF THERE IS SOME LIQUID FLOWN OUT,

THEN TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY COMPARTMENT WITH A DRY CLOTH!

KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND RECHARGE THE BATTERY! RISK OF EXPLOSION!

Immediately remove the depleted batteries! Do not use different kinds of batteries and/or used and new batteries together! Non-rechargeable batteries must not be charged! Risk of explosion! Do not insert accumulators instead of batteries because they have a significantly lower voltage and efficiency!

• The product is not a toy. Keep out of reach of children. • THIS PRODUCT INCLUDES A BUTTON BATTERY. IT IS FORBIDDEN TO SWALLOW THE BATTERY. RISK OF EXPLOSION IN CASE OF INCORRECT BATTERY REPLACEMENT! BATTERY CAN BE REPLACED ONLY WITH SAME OR REPLACING TYPE! DO NOT EXPOSE TO DIRECT HEAT RADIATION AND SUNSHINE AND DO NOT THROW IT TO FIRE IF THERE IS SOME LIQUID FLOWN OUT,

THEN TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY COMPARTMENT WITH A DRY CLOTH!

KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND RECHARGE THE BATTERY! RISK OF EXPLOSION!

Immediately remove the depleted batteries! Do not use different kinds of batteries and/or used and new batteries together! Non-rechargeable batteries must not be charged! Risk of explosion! Do not insert accumulators instead of batteries because they have a significantly lower voltage and efficiency!

• The product is not a toy. Keep out of reach of children. • THIS PRODUCT INCLUDES A BUTTON BATTERY. IT IS FORBIDDEN TO SWALLOW THE BATTERY. RISK OF EXPLOSION IN CASE OF INCORRECT BATTERY REPLACEMENT! BATTERY CAN BE REPLACED ONLY WITH SAME OR REPLACING TYPE! DO NOT EXPOSE TO DIRECT HEAT RADIATION AND SUNSHINE AND DO NOT THROW IT TO FIRE IF THERE IS SOME LIQUID FLOWN OUT,

THEN TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY COMPARTMENT WITH A DRY CLOTH!

KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND RECHARGE THE BATTERY! RISK OF EXPLOSION!

Immediately remove the depleted batteries! Do not use different kinds of batteries and/or used and new batteries together! Non-rechargeable batteries must not be charged! Risk of explosion! Do not insert accumulators instead of batteries because they have a significantly lower voltage and efficiency!

• The product is not a toy. Keep out of reach of children. • THIS PRODUCT INCLUDES A BUTTON BATTERY. IT IS FORBIDDEN TO SWALLOW THE BATTERY. RISK OF EXPLOSION IN CASE OF INCORRECT BATTERY REPLACEMENT! BATTERY CAN BE REPLACED ONLY WITH SAME OR REPLACING TYPE! DO NOT EXPOSE TO DIRECT HEAT RADIATION AND SUNSHINE AND DO NOT THROW IT TO FIRE IF THERE IS SOME LIQUID FLOWN OUT,

THEN TAKE A PROTECTIVE GLOVE AND CLEAN THE BATTERY COMPARTMENT WITH A DRY CLOTH!

KEEP THE BATTERY OUT OF REACH OF CHILDREN! IT IS FORBIDDEN TO OPEN, BURN, SHORT CIRCUIT AND RECHARGE THE BATTERY! RISK OF EXPLOSION!

Immediately remove the depleted batteries! Do not use different kinds of batteries and/or used and new batteries together! Non-rechargeable batteries must not be charged! Risk of explosion! Do not insert accumulators instead of batteries because they have a significantly lower voltage and efficiency!

EN

alarm clock

It is possible to set 3 times simultaneously and the alarm is repeated daily. The beep-beep sounds for a minute or can be turned off by any button. Select one of A1-A2-A3 alarms with SET button. Then keep holding for 2 seconds and set the desired time with UP and DOWN buttons. After setting the hours, press SET to confirm setting the minutes.

In the upper line of the display, a point lights up in case of the alarm has been set. The UP button will turn on or off the currently selected A1, A2 or A3 alarm time.

-- A1, -- A2, -- A3: alarm is switched off

ON A1, ON A2, ON A3: alarm is switched on

If no button is pressed for 15 seconds, it will exit the settings and record the current date.

When alarm is active, the dark display which is set to energy saving mode will turn on automatically.

-- SD: energy saving mode and sound detector is switched off

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

ON SD: energy saving mode and acoustic switch is activated

